



A Benny Lee Company

PRODUCT USER GUIDE

RLP-2024

Heavy Duty AC to DC Power Supply Owners Guide

(These instructions are intended for use by a technician familiar with electronic products)

- Power Factor Correction
- Auto Ranging Input Voltage 100 to 260 VAC
- Metering: Voltage / Amperage
- Remote Sense / Remote Control
- DC-OK TTL signal
- Short Circuit / Overload / Over Voltage / Over Temperature Protection
- 3 year warranty



DESCRIPTION

The RLP-2024 comes with a built-in meter that can monitor voltage and amperage by simply switching the Knob that is located to the right of the display (Note: the RLP-2024 can only monitor one input at a time). Along with a metered display the RLP comes with remote sense and remote control. The RLP-2024 has auto ranging input voltage from 100 to 260 VAC and comes with four layers of protection short circuit, overload, over voltage, and over temperature.

SPECIFICATIONS

Output Voltage.....	24-28.0 V
Output Voltage Tolerance.....	+/- 1 %.
Output Amperage	17Amps, cont.
Maximum Power, continuous	500 Watts
Output Voltage Adjustment.....	24-28 VDC
Maximum Ripple and Noise.....	200 mV p-p max
Input Voltage, auto-range	90-260 VAC
Input Frequency Range	47-63 Hz
Maximum AC Current	7 Amps/120 VAC; 4 Amps/240 VAC
Typical Efficiency	80 %
Max Inrush Current, single cycle	20Amps/120VAC; 40Amps/240 VAC
Short Circuit Protection.....	Fold Back Limiting
Overload Protection (operates)	typical 110-120 pct.
Line Regulation.....	.02%
Load Regulation	0.5 % (20-100 % load)
Fan Control	Heat sink temp >140 F (60 C) = ON
Over Temperature	>195 F (90 C) auto output shutdown
Rise Time following ON	50 mS
Hold Time following OFF	15 mS
Working Temperature Range	-4 - 140 F (-20 - +60 C)
Storage Temperature	-40 - 185 F (-40 - +85 C)
Withstand Voltage*	1.5 KV @ 10 ma (I/P-O/P, I/P-FG)/1 min
(Continued)	500 V @ 10 ma (O/P-FG)/1 min
Dimensions	3.5H x 19W x 12D inches, nominal
Weight	15 lbs., nominal

BATTERY BACK UP & CHARGER (Optional)

Maximum Power, continuous	500 Watts
Auto-revert to Battery or Power Supply	Provided by dual Shottky diode in OR configuration
Maximum Output Current in Battery Mode	40 Amps (limited by Shottky diode)
Maximum Charge Voltage	27.6 VDC
Maximum Recharge Rate	3.5 Amps with auto sensing of charge current
Charger Protection	Overload/voltage/temperature/reverse polarity protected
Dead Battery Protection	Shot circuit protected with deep discharge start function
AC Input	90-130 / 180-260 VAC, 47-63 Hz, switch selected
Visual Indication	Two-state LED indication: Red = high rate charge, Green = Float charge / Monitoring

LOW VOLTAGE DISCONNECT with RELAY (Optional)

Maximum Current	40 Amps
Disconnect Voltage	23 VDC
Reconnect Voltage	25 VDC

INSTALLATION WARNING

WARNING: THERE ARE NO USER SERVICEABLE PARTS INSIDE. SERVICE AND REPAIR MUST BE REFERRED TO QUALIFIED FACTORY PERSONNEL.

NOTE: The individual user should take care to determine, prior to use or installation, whether this device is suitable, adequate or safe for the use intended. Since individual applications are subject to great variation, DuraComm makes no representation or warranty as to the merchantability, suitability or fitness of these units for any specific application.

NOTE: The precision regulated power supplies operate internally from voltages in excess of 12/24/48 volts. In rare cases, voltage spikes or transients on the AC power line, or overheating, may cause a component failure in the power supply. Overloading the output will cause the over current feature to operate. In either case, the cause must be determined and corrected.

Failures require investigation as to cause and/or repair of the unit.

INSTALLER NOTES

NOTE: DO NOT block any of the cooling vents on the sides and always allow adequate ventilation by not installing the unit inside tightly closed spaces. Physical mounting position is not critical but the cooling vents must not be blocked.

NOTE: The outputs are NOT referenced to the chassis. **The Modular System can be used either positive or negative ground.**

METER CIRCUITS

The panel meter is switched to provide DC output voltage measurement and individual output load current measurement for each individual module.

When set to the VOLT position, the full scale reading is 30 volts.

When set to the AMP position, the full scale reading is 60 amps.

The meter and associated circuitry accuracy is 10 percent of full scale deflection. Since full scale is 60 amps, a 20 amp current can vary from 18 to 22 amps indicated. To prevent unnecessary output voltage drops, the meter circuits use the voltage drop of the black #12 AWG negative return to the module as a meter shunt. The #12 AWG wires provide a nominal 100 mV drop at 30 amps

INSTALLATION BLOCK DIAGRAM

DC-OK / Power Good (P.G.) - (Pok) and Power Fail (P.F.) Signal

When the power supply is powered on or off., PG/Pok, or PF signals are sent out for status monitoring. P.G. :A TTL (+5V) signal will be sent out with a delay of 10~500ms after output voltage reached 90% of rated value.

PF: The TTL signal will be turned off at least 1ms before the output voltage drops to 90% of rated value. Pok: A TTL signal is sent out in synchronization with output voltage. It is without functionality in time sequence.

DC-OK Signal

DC-OK Signal is the voltage difference between "DC-OK" and "G" pin output

DC-OK Signal is a TTL level signal
 PSU turn on: 3.3 ~ 5.6V
 PSU turn off: 0 ~ 1V

Remote Control ON/OFF:

Remote control ON/OFF: Using a TTL control signal connected to the RC+, RC- terminals on the power supply

TTL Remote Control	
between RC+ and RC-	output
switch OFF (0-0.8V)	ON
switch ON (4-10V)	OFF


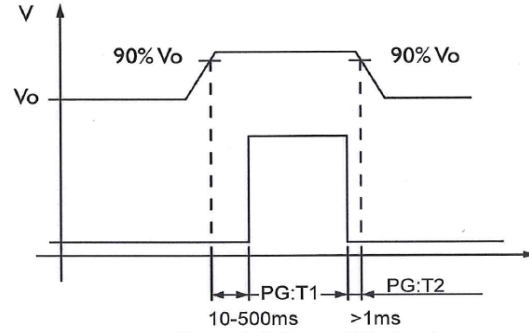


Figure 1 P.G. and P.F. signals

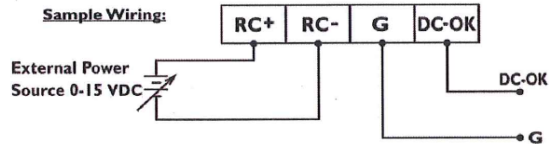

CONDUCTOR PRETREATMENT

All kinds of copper conductors can be clamped without treatment. DO NOT solder tin stranded conductors. The solder yields and fractures under high pressure. The result is increased contact resistance and excessive temperature rise. Additionally, corrosion has been observed due to the fluxes. Notch fractures at the transition from the rigid tinned part to the flexible conductors are also possible. Ferrules can be used as a protection when wiring stranded conductors. Copper ferrules prevent the current transfer from being influenced by dissimilar metals and remove the risk of corrosion. Always use the correct tool to crimp the ferrule

RECOMMENDED COPPER WIRE SIZE FOR CURRENT CAPACITY

(Insulated Wire, Single Conductor in free air)

<u>Current Level in Amperes</u>	<u>Wire Size</u>
<7 AMPERES	20 AWG Up to 5 feet 18 AWG Up to 10 feet
14 AMPERES	18 AWG Up to 5 feet 16 AWG Up to 10 feet
20 AMPERES	16 AWG Up to 5 feet 14 AWG Up to 10 feet
30 AMPERES	14 AWG Up to 5 feet 12 AWG Up to 10 feet
40 AMPERES	12 AWG Up to 5 feet 10 AWG Up to 10 feet
50 AMPERES	10 AWG Up to 5 feet 8 AWG Up to 10 feet
70 AMPERES	8 AWG Up to 5 feet 6 AWG Up to 10 feet
100 AMPERES	6 AWG Up to 5 feet 4 AWG Up to 10 feet

LIMITED WARRANTY

DuraComm warrants to the initial end user, each power supply manufactured by DuraComm to be free from defects in material and workmanship, when in normal use and service for a period of three year from the date of purchase, from an authorized DuraComm dealer.

Should a product manufactured by DuraComm fail or malfunction due to manufacturing defect, or faulty component, DuraComm, at its option, will repair or replace the faulty product or parts thereof, which, after examination by DuraComm, prove to be defective or not operational according to specifications in effect at the time of sale to the initial end user. The product that is replaced or repaired under the provisions of this warranty, will be warranted for the remainder of the original warranty period, only, and will not extend into a new three year warranty period.

The limited warranty does not extend to any DuraComm product which has been subject to misuse, accidental damage, neglect, incorrect wiring not associated with manufacture, improper charging voltages, or any product which has had the serial number removed, altered, defaced, or changed in any way.

DuraComm reserves the right to change, alter, or improve the specifications of its products at any time, and by so doing, incurs no obligation to install or retrofit any such changes or improvements in or on products manufactured prior to inclusion of such changes.

DuraComm requires any product needing in or out of warranty service to be returned to DuraComm. All requests for warranty service must be accompanied by proof of purchase, such as bill of sale with purchase date identified. DuraComm is not responsible for any expenses or payments incurred for the removal of the product from its place of use, transportation or shipping expenses to the place of repair, or return expenses of a repaired or replacement product to its place of use.

The implied warranties which the law imposes on the sale of this product are expressly LIMITED, in duration, to the three (3) year time period specified herein. DuraComm will not be liable for damages, consequential or otherwise, resulting from the use and operation of this product, or from the breach of this LIMITED WARRANTY.

Some states do not allow limitations on the duration of the implied warranty or exclusions or limitations of incidental or consequential damages, so said limitations or exclusions may not apply to you. This warranty gives you specific legal rights which vary from state to state.

This warranty is given in lieu of all other warranties, whether expressed, implied, or by law. All other warranties, including WITHOUT LIMITATION, warranties of merchantability and fitness or suitability for a particular purpose, are specifically excluded. DuraComm reserves the right to change or modify its warranty and service programs without prior notice.

DuraComm® Corporation

6655 Troost Avenue
Kansas City, MO 64131
Phone (816) 472-5544 Fax (816) 472-0959
www.duracomm.com